

Kawasaki ZX-6R Ninja 2005-2006 (ARA-1 + ARA-K4A + ARA-D02)

Secure the bike on a stand.



Remove the black frame covers below the main seat.

Remove the seats.


Lift up or remove the fuel tank and remove the airbox.



Plug the ARA connectors in-line with the ignition coil connectors.

On this photo the ARA used together with the iQSE quickshifter. The iQSE plugs should always be the last in the chain i.e. connected directly to the ignition coil plugs.

(Bike harness plug -> ARA plugs -> QSH plugs -> ignition coil plug.)

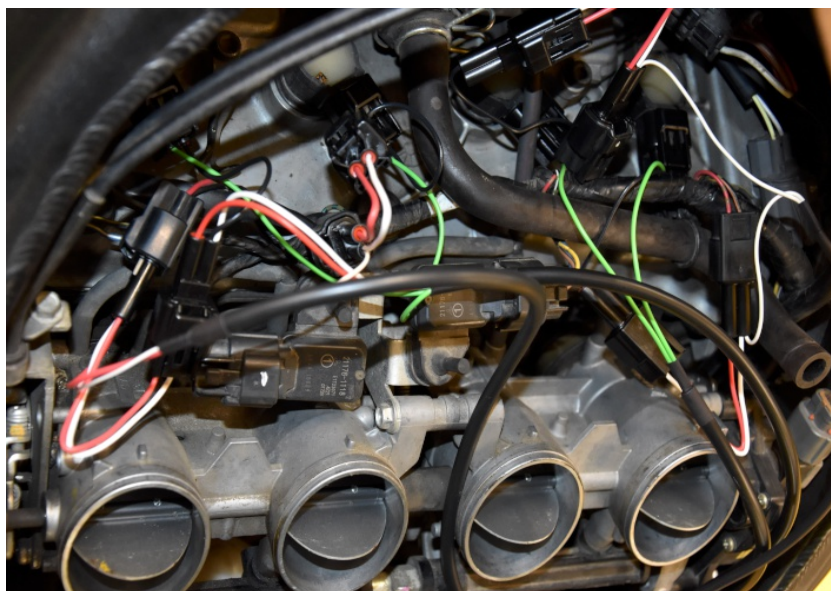


Kawasaki ZX-6R Ninja 2005-2006 (ARA-1 + ARA-K4A + ARA-D02)

Connect the ARA Black wire terminal to the battery negative terminal.




Mount the supplied disk and wheel speed sensor at the front wheel.

(For the disk mounting see the Front Disc Mounting all bikes without ABS supplementary manual. Reinstall the brake disk as per the bike's service manual. For safety, you may use threadlocker to make sure the nut or bolt won't get loose due to vibrations. Adjust and tighten the sensor so that the sensor's tip will be in the centerline of the targets. The air-gap should be about 1mm.)

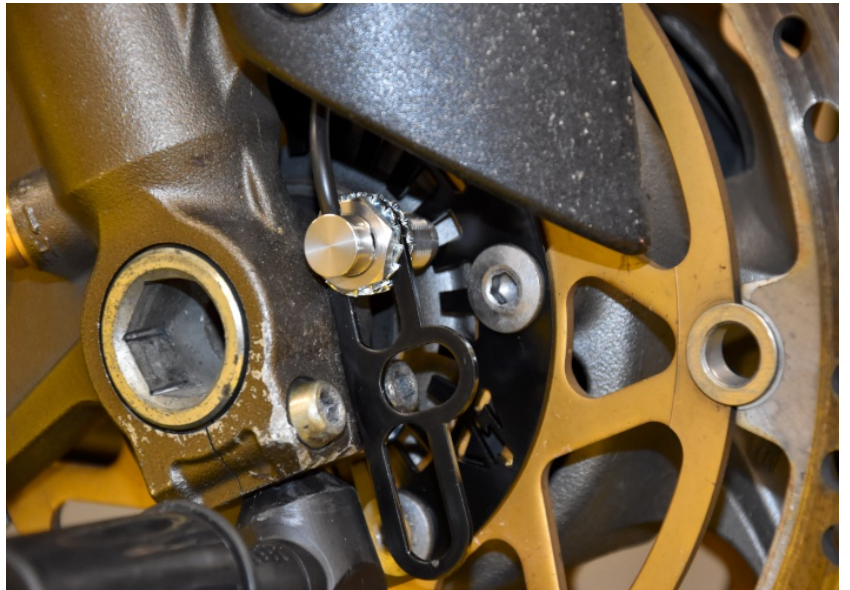

Splice the ARA Green wire to the Yellow wire of the speed sensor connector.

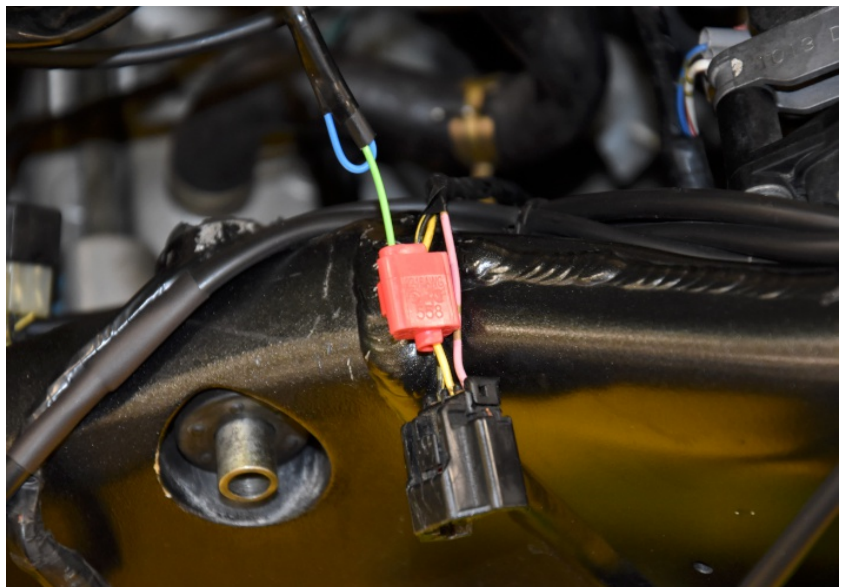


Kawasaki ZX-6R Ninja 2005-2006 (ARA-1 + ARA-K4A + ARA-D02)

Optional:

Connect the Pink ARA wire to the Black wire of the Clutch switch at the black multi connector on the right side next to the fork leg.

While the connector is connected, turn ignition on. Measure the voltage (DC 20V setting) on the wires, at the back side of the plug. You need to use the wire where the voltage value changes while you pull the clutch lever. Alternatively check the clutch switch indication in the ARA application on your phone.

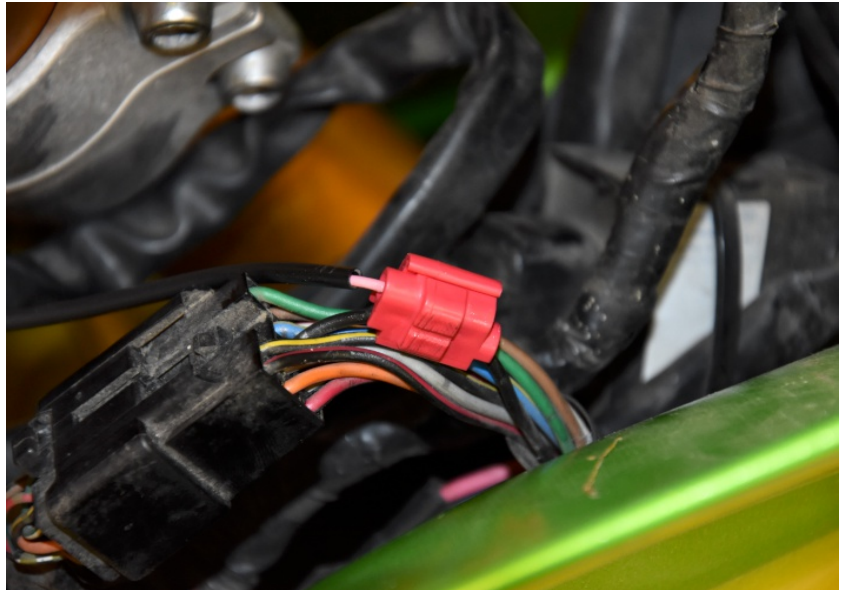

Mount the switch onto the handlebar.



Mount the LED indicator on the dashboard.



Kawasaki ZX-6R Ninja 2005-2006 (ARA-1 + ARA-K4A + ARA-D02)

Typical position for the ARA module.

Secure the unit properly.

