

Exhaust Servo Eliminator Supplementary Manual

Aprilia RSV Tuono V4 ABS TC 2021- (ESE-A04)


Secure the bike on a stand.



Locate the exhaust servo motor on the right side.



Remove the exhaust servo motor and unplug the exhaust servo motor connector.

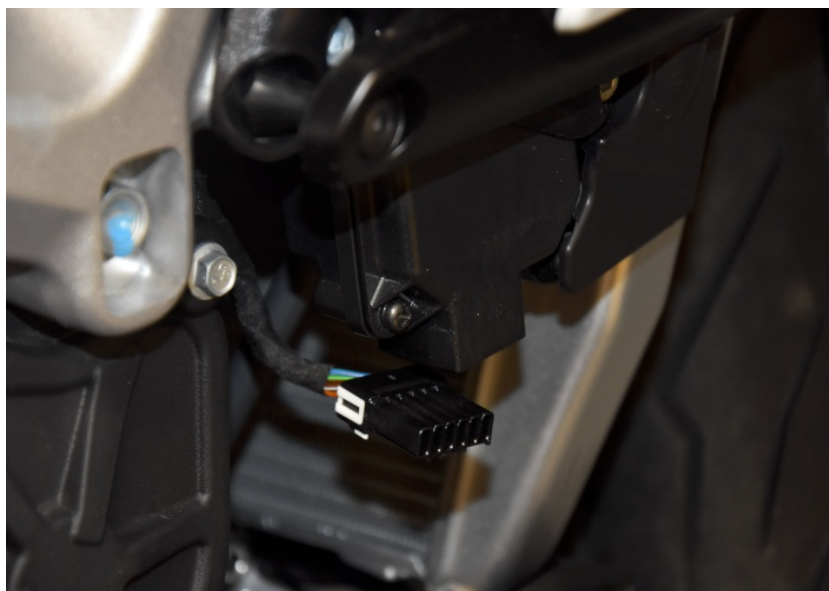

Exhaust Servo Eliminator Supplementary Manual



Aprilia RSV Tuono V4 ABS TC 2021- (ESE-A04)

Plug the ESE connectors to the exhaust servo motor connectors.

Secure the unit properly.

(Try to place it as far as possible away from the heat source.)

