




SUPPLEMENTARY MANUAL

for GPDS-H01

REMOVE THE
LEFT SIDE MIDDLE FAIRING.



CONNECT DS-SERIES CONNECTOR
TO
DIAGNOSTIC SYSTEM CONNECTOR.
(RED, 4-POLE CONNECTOR WITH RED CAP
NEAR FUSEBOX)

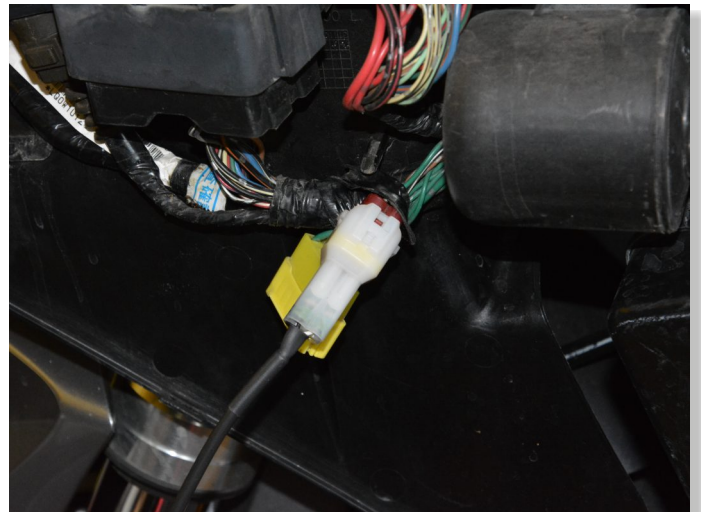

TYPICAL POSITION FOR THE
GEAR INDICATOR.

