

# KTM SMR 450

(2004-2007)



## SUPPLEMENTARY MANUAL

for GPXT + GPX-WSS

SECURE THE BIKE ON A STAND.



REMOVE THE  
LEFT AND RIGHT SIDE PLASTIC  
COVERS.



REMOVE THE THE FUEL TANK.






# SUPPLEMENTARY MANUAL

for GPXT + GPX-WSS


## MOUNT THE WHEEL SPEED SENSOR AT THE REAR WHEEL.

(ANY ROTATING METAL TARGETS WILL WORK, BUT THE TARGETS MUST BE SPACED AT EQUAL DISTANCES. ADJUST AND TIGHTEN THE SENSOR SO THAT THE TIP OF THE SENSOR WILL BE IN-LINE WITH THE CENTER OF THE TARGET. THE AIR-GAP SHOULD BE ABOUT 1MM.)

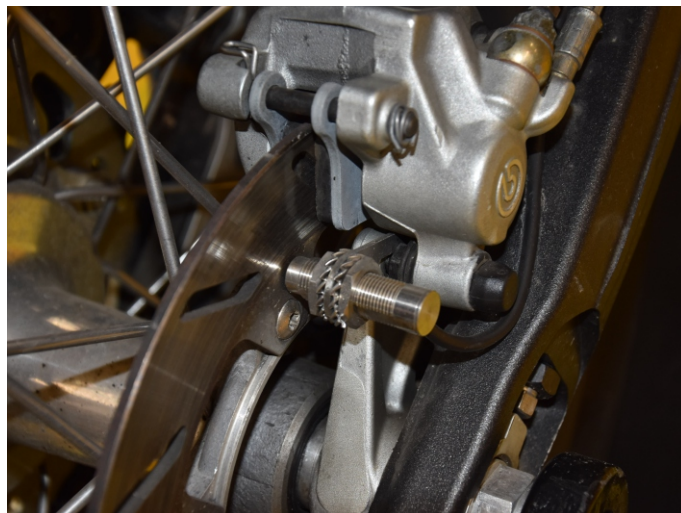


## CONNECT THE GPX BLACK WIRE TO THE IGNITION COIL BROWN WIRE (GROUND TERMINAL).

ALSO CONNECT THE IGNITION COIL  
GROUND TERMINAL TO THE BATTERY  
NEGATIVE TERMINAL.

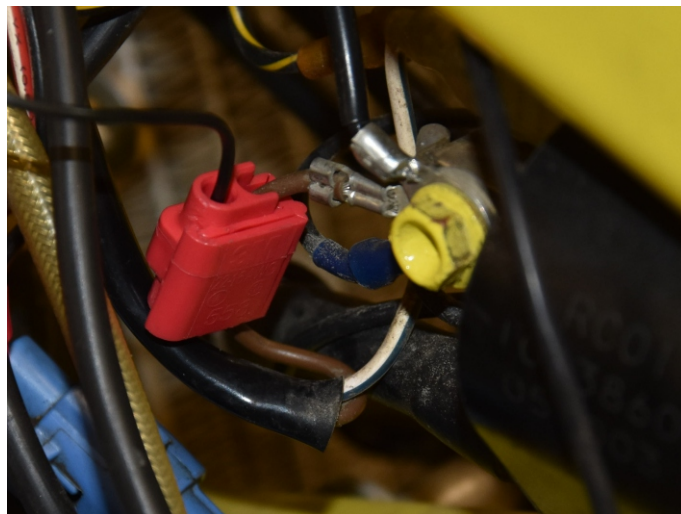

## CONNECT THE GPX RED WIRE TO THE BATTERY POSITIVE TERMINAL VIA AN ON/OFF SWITCH.

(WE RECOMMEND USING A 12V GEL-TYPE BATTERY  
WITH 1.3AH CAPACITY OR SMALLER.)

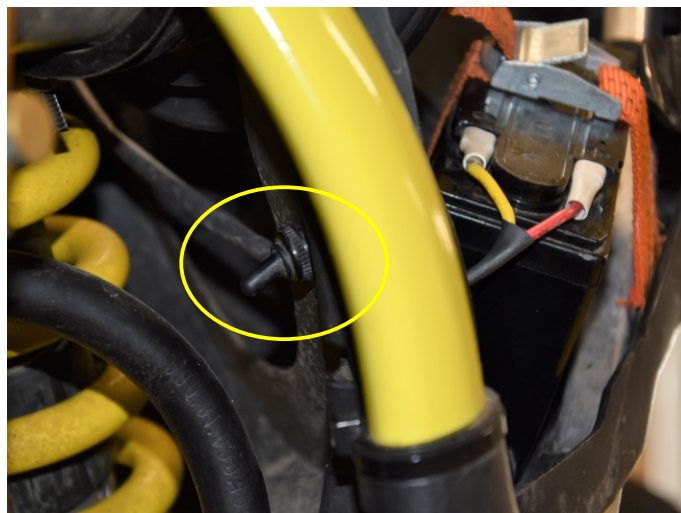






# SUPPLEMENTARY MANUAL

for GPXT + GPX-WSS

**CONNECT THE GPX BLACK/GREEN WIRE TO THE RED WIRE OF THE CRANKSHAFT POSITION SENSOR CONNECTOR.**

(BLUE, 2-POLE CONNECTOR BELOW THE FUEL TANK.)

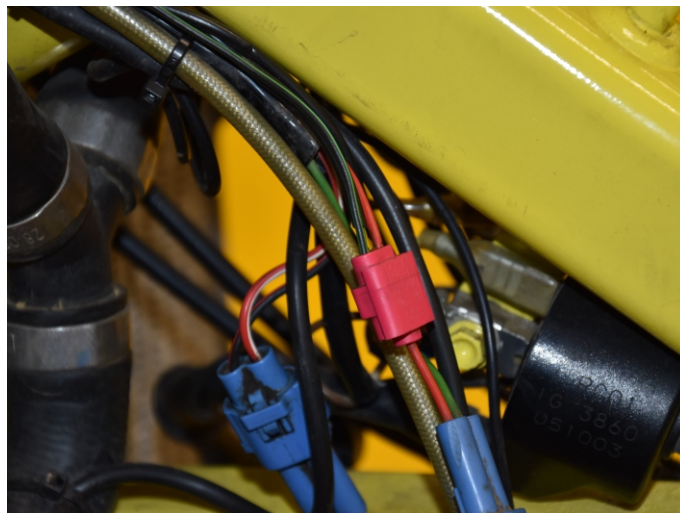

**CONNECT THE 3-POLE SENSOR CONNECTOR TO THE GPX WIRING HARNESS CONNECTOR.**

**SECURE THE UNIT PROPERLY.**

**TYPICAL POSITION FOR THE GEAR INDICATOR.**

(SHOWN WITH THE OPTIONAL GIPRO MOUNT, PART NO.: GIPRO-M-BK.)

