




SUPPLEMENTARY MANUAL

for GPXT+ GPX-Y01

REMOVE THE MAIN SEAT.

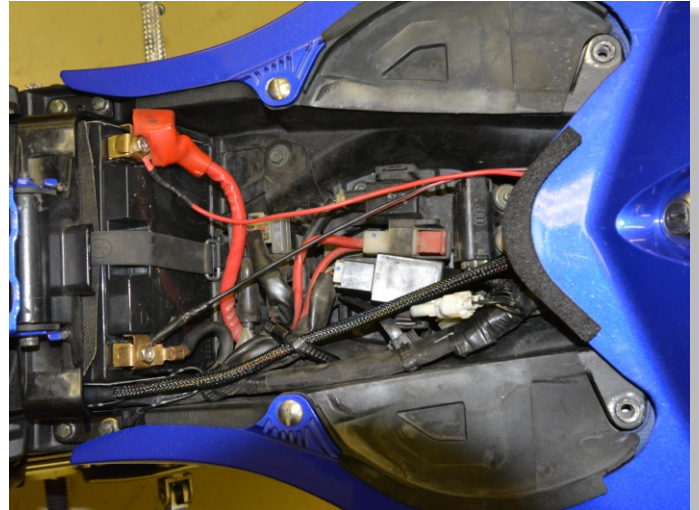

REMOVE THE BLACK TANK COVERS.
LIFT UP OR REMOVE THE
FUEL TANK.



PLUG THE GPX CONNECTORS IN-
LINE WITH THE SPEED SENSOR
CONNECTORS.

(WHITE, 3-POLE TRIANGULAR CONNECTORS
AT TH RIGHT SIDE, BELOW THE FUEL TANK.)






SUPPLEMENTARY MANUAL

for GPXT+ GPX-Y01


CONNECT THE GPX BLACK/GREEN WIRE TO THE GRAY WIRE OF THE CRANKSHAFT POSITION SENSOR CONNECTOR.

(TRANSPARENT, 2-POLE CONNECTOR AT THE RIGHT SIDE, BELOW THE FUEL TANK.)

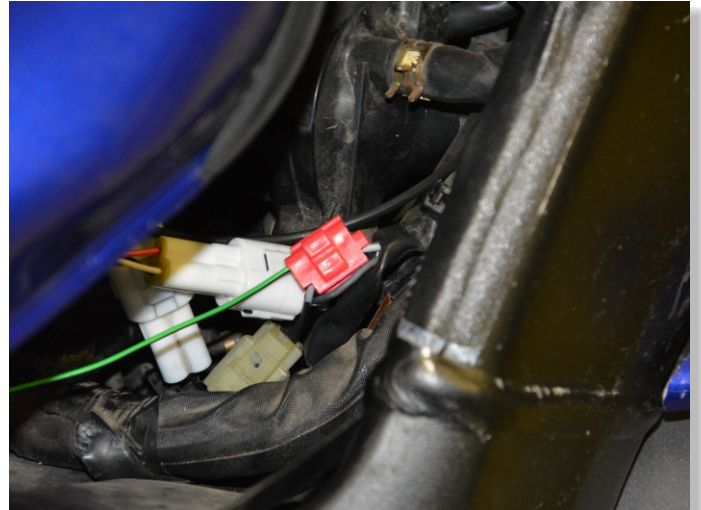

CONNECT THE GPX RED WIRE TO THE BROWN WIRE OF THE REAR BRAKELIGHT SWITCH CONNECTOR.

(BROWN, 2-POLE CONNECTOR AT THE RIGHT SIDE, BELOW FUEL TANK.)

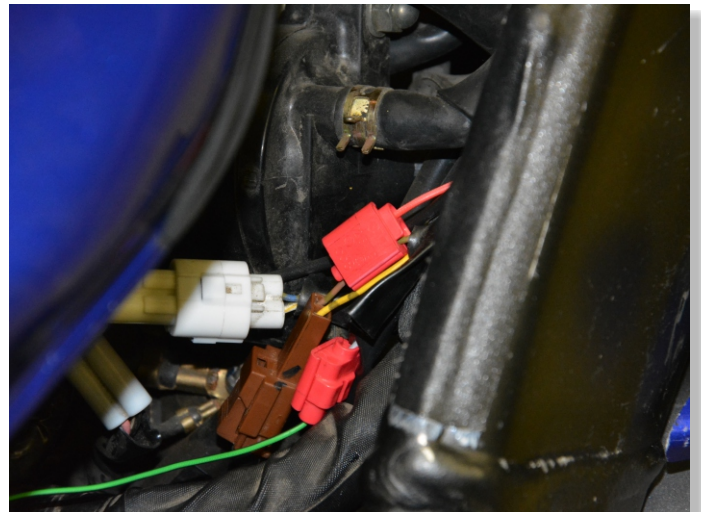

TYPICAL POSITION FOR THE GEAR INDICATOR.

