



# SUPPLEMENTARY MANUAL

for GPXT + GPX-Y01

REMOVE THE MAIN SEAT.



LIFT UP OR REMOVE THE  
FUEL TANK.



CONNECT THE GPX PLUGS TO THE  
SPEED SENSOR CONNECTORS.

(WHITE, 3-POLE TRIANGULAR CONNECTORS.)






# SUPPLEMENTARY MANUAL

for GPXT + GPX-Y01

CONNECT THE GPX BLACK/GREEN WIRE TO THE GRAY WIRE OF THE CRANKSHAFT POSITION SENSOR CONNECTOR, WHICH IS WHITE/RED AT THE OTHER SIDE OF THE PLUG.

(TRANSPARENT, 2-POLE CONNECTOR.)

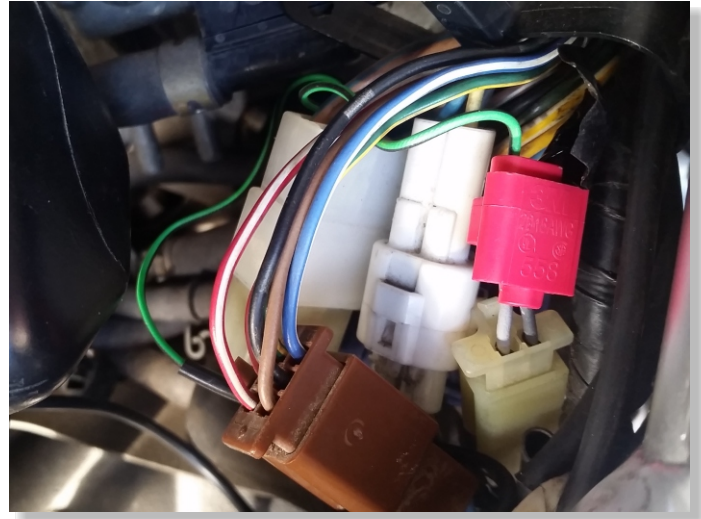

CONNECT THE GPX RED WIRE TO THE BROWN WIRE OF THE REAR BRAKELIGHT SWITCH CONNECTOR.

(BLACK, 2-POLE CONNECTOR AT THE RIGHT SIDE.)



TYPICAL POSITION FOR THE GEAR INDICATOR..

