




SUPPLEMENTARY MANUAL

for GPXT + GPX-Y01

REMOVE THE MAIN SEAT.

REMOVE THE BLACK COVERS FROM
THE FUEL TANK.

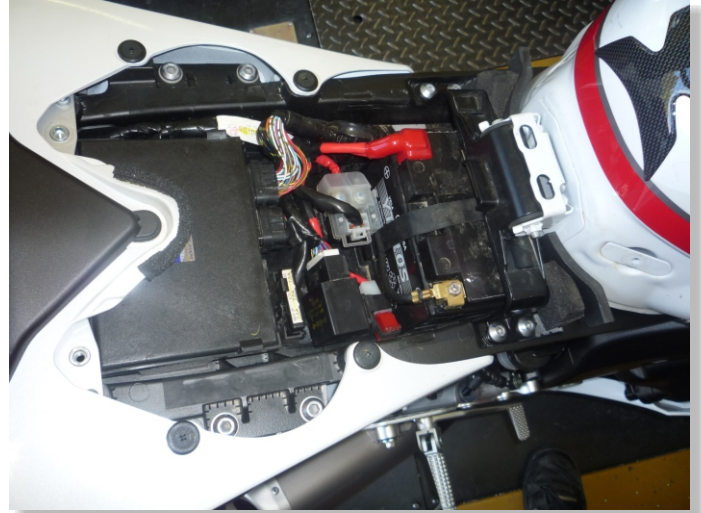


LIFT UP OR REMOVE THE
FUEL TANK.



PLUG THE GPX CONNECTORS IN-
LINE WITH THE SPEED SENSOR
CONNECTORS.

(WHITE, 3-POLE TRIANGULAR CONNECTORS
AT THE RIGHT SIDE.)

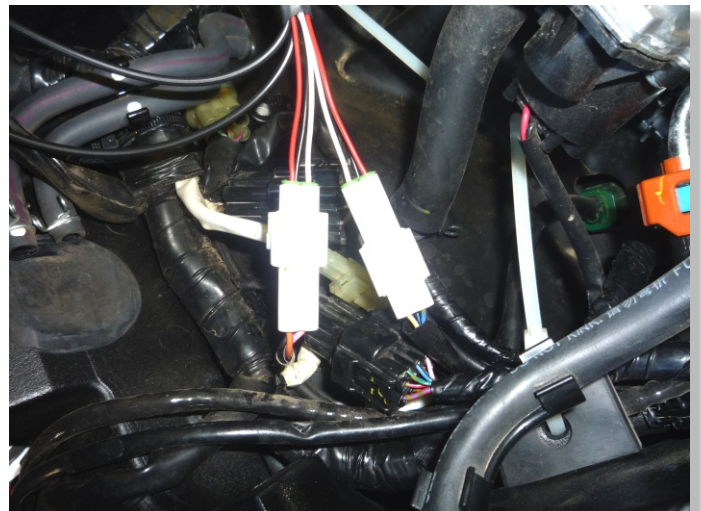



SUPPLEMENTARY MANUAL

for GPXT + GPX-Y01

CONNECT THE GPX BLACK/GREEN WIRE TO THE GRAY WIRE OF THE CRANKSHAFT POSITION SENSOR CONNECTOR.

(TRANSPARENT, 2-POLE CONNECTOR BELOW THE FUEL TANK.)



CONNECT THE GPX RED WIRE TO THE BROWN WIRE OF THE REAR BRAKELIGHT SWITCH CONNECTOR.

(BLACK, 2-POLE CONNECTOR AT THE RIGHT SIDE.)



TYPICAL POSITION FOR THE GEAR INDICATOR.

