

SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4B

REMOVE THE MAIN SEAT.



REMOVE THE BLACK SIDE COVERS
FROM FUEL TANK COVER.
REMOVE THE FUEL TANK COVER.



REMOVE THE FUEL TANK.






REMOVE THE AIRBOX.




REMOVE THE AIR INTAKE BELOW THE AIRBOX.

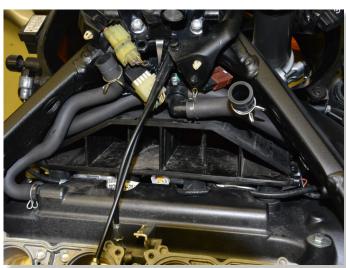


PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.

(BLACK, Z-POLE CONNECTORS BELOW AIR INTAKE)

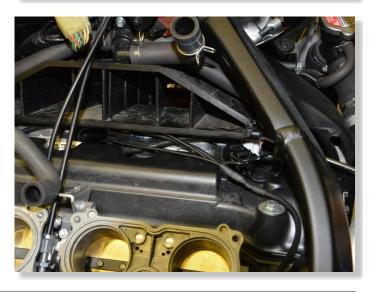



CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.

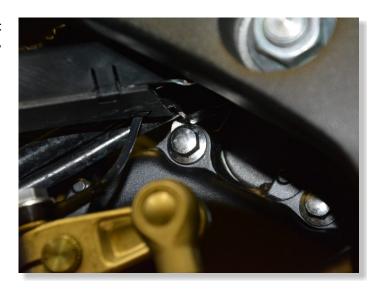

MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (D). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

FOR DIFFERENT MOUNTING OPTIONS, REFER TO THE SENSOR INSTALL GUIDE.)



TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

