

CARENABRÍS PARA WINDSHIELD FOR WINDSCHUTZSCHEIBE FÜR KAWASAKI Z650

Ref.: 9588
(Mod. SPORT)




Ref.: 9369
(Mod. TOURING)

Mod. SPORT




Mod. TOURING



| | | | |
|--|---|---|--|
|  1 persona 1 person |  15 min | Fácil - Easy Media-Intermediate Difícil - Difficult |  ALLEN Nº 3 Nº 4 |
|--|---|---|--|


| ID. | PIEZA/PART | DESCRIP. | QTY. |
|-----|---|---|------|
| 1 |  | Carenabris SPORT (Ref. 9588) SPORT windshield | 1 |
| |  | Carenabris TOURING (Ref. 9369) TOURING windshield | |
| 2 |  | Soporte metálico derecho Right metal support | 1 |
| 3 |  | Soporte metálico izquierdo Left metal support | 1 |
| 4 |  | Tornillo Allen M5x16 Ø11 ISO 7380 M5x16 Ø11 ISO 7380 Allen screw | 4 |
| 5 |  | Tornillo Allen M5x20 Ø11 ISO 7380 M5x20 Ø11 ISO 7380 Allen screw | 4 |
| 6 |  | Silentblock M5 M5 Silentblock | 4 |
| 7 |  | Arandela de nylon M5x0,5 M5x0,5 nylon washer | 4 |
| 8 |  | Arandela de nylon Ø6.2xØ12x3mm Ø6.2xØ12x3mm nylon washer | 4 |
| 9 |  | Tapón tornillo M5 ISO 7380 M5 ISO 7380 screw cap | 4 |

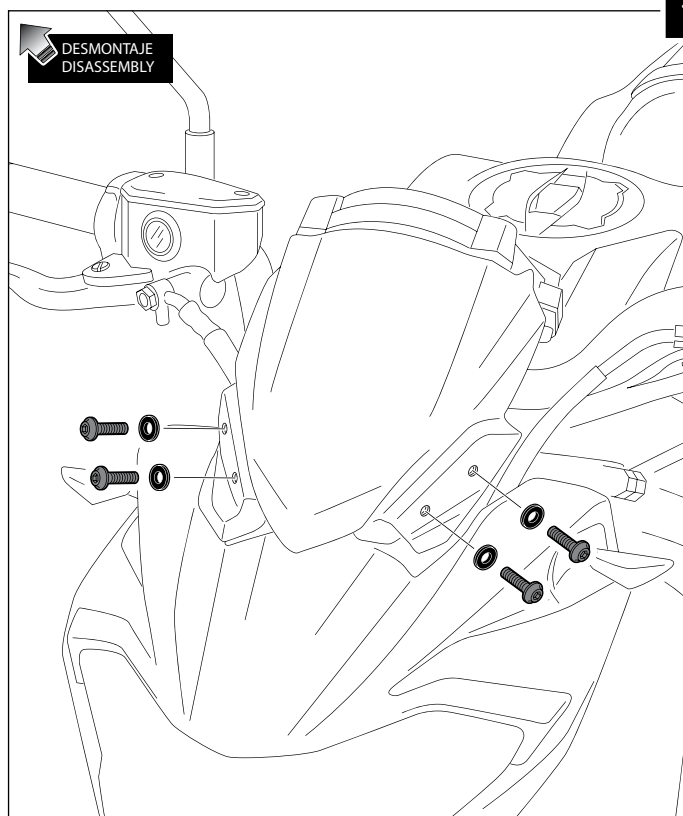

CARENABRÍS PARA - WINDSHIELD FOR - WINDSCHUTZSCHEIBE FÜR
KAWASAKI Z650

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

2

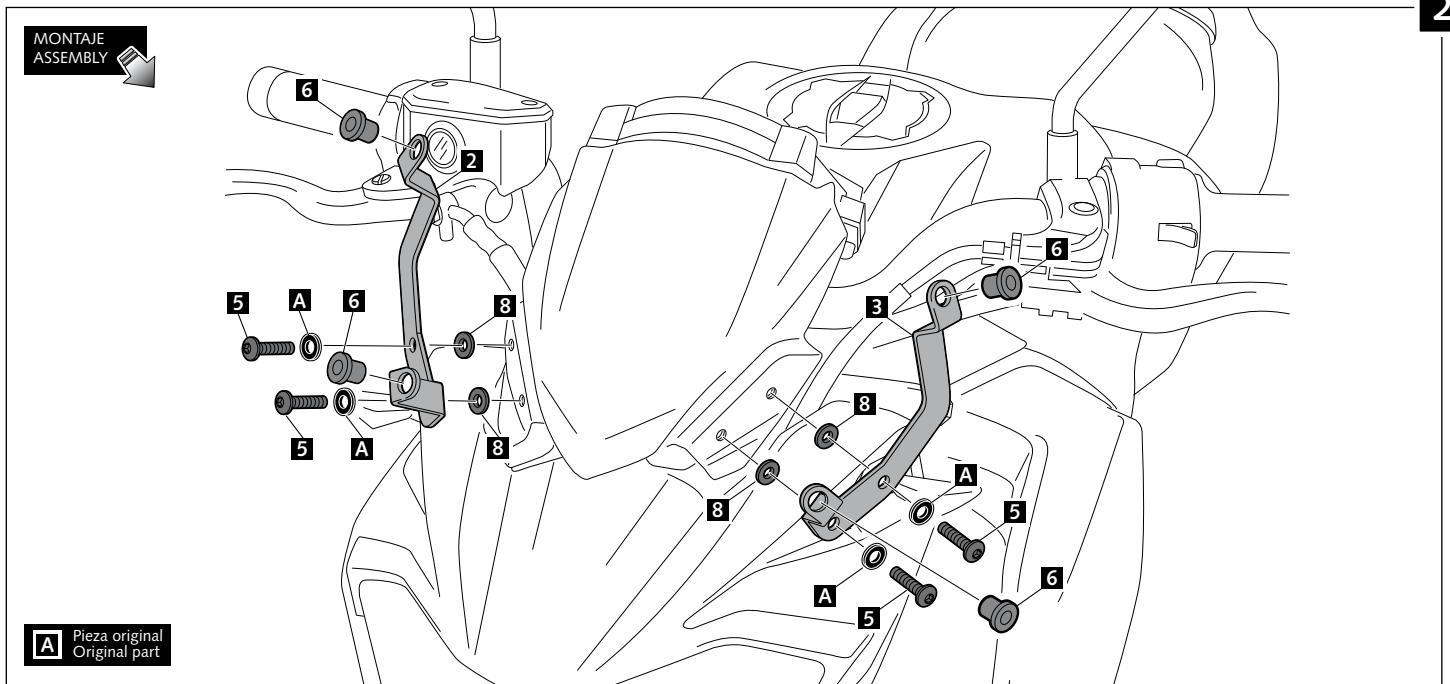

3

