

Honda VFR800 Interceptor ABS 2002-2020 (EST-01)

Secure the bike on a stand.



Remove the seat and remove the black frame covers below the seat.

Remove the side fairings.

Lift up or remove the fuel tank and remove the airbox.



Connect the vacuum hoses to the vacuum ports of the cylinders.

Connect the USB plug to the computer.

(Black hose to the first cylinder.

Green hose to the second cylinder.

Red hose to the third cylinder.


Yellow hose to the fourth cylinder.)



Honda VFR800 Interceptor ABS 2002-2020 (EST-01)

Start the engine.

Adjust the cylinders to get them in sync with the Reference (first) cylinder.

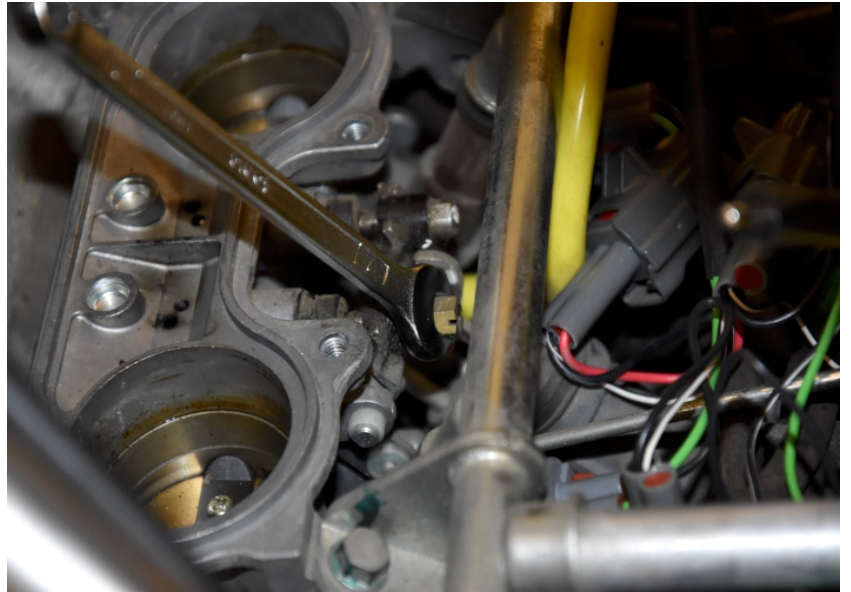

When the cylinders are in sync, the Grey background will change to Green color.

