

## ASSEMBLING INSTRUCTION


### CRASH PAD FITTING

KN9101-17

WWW.BARRACUDAMOTO.COM

## LEGEND

- |   |  |
|---|--|
| <b>1.</b> HEAD PAD<br>TESTA TAMPONE<br>TIESTA DE TOPE<br>STURZPAD KOPF<br>TÊTE TAMPON | <b>3.</b> SPECIFIC THICKNESS H80MM<br>SPESSORE SPECIFICO H80MM<br>ESPACIADOR H80MM<br>ABSTANDSHALTER H80MM<br>ESPACEUR H80MM |
| <b>2.</b> BASE PAD<br>BASE TAMPONE<br>BASE DE TOPE<br>STURZPAD BASIS<br>BASE TAMPON   | <b>4.</b> SCREW M10X140<br>VITE M10X140<br>TORNILLO M10X140<br>SCHRAUBE M10X140<br>VIS M10X140                               |

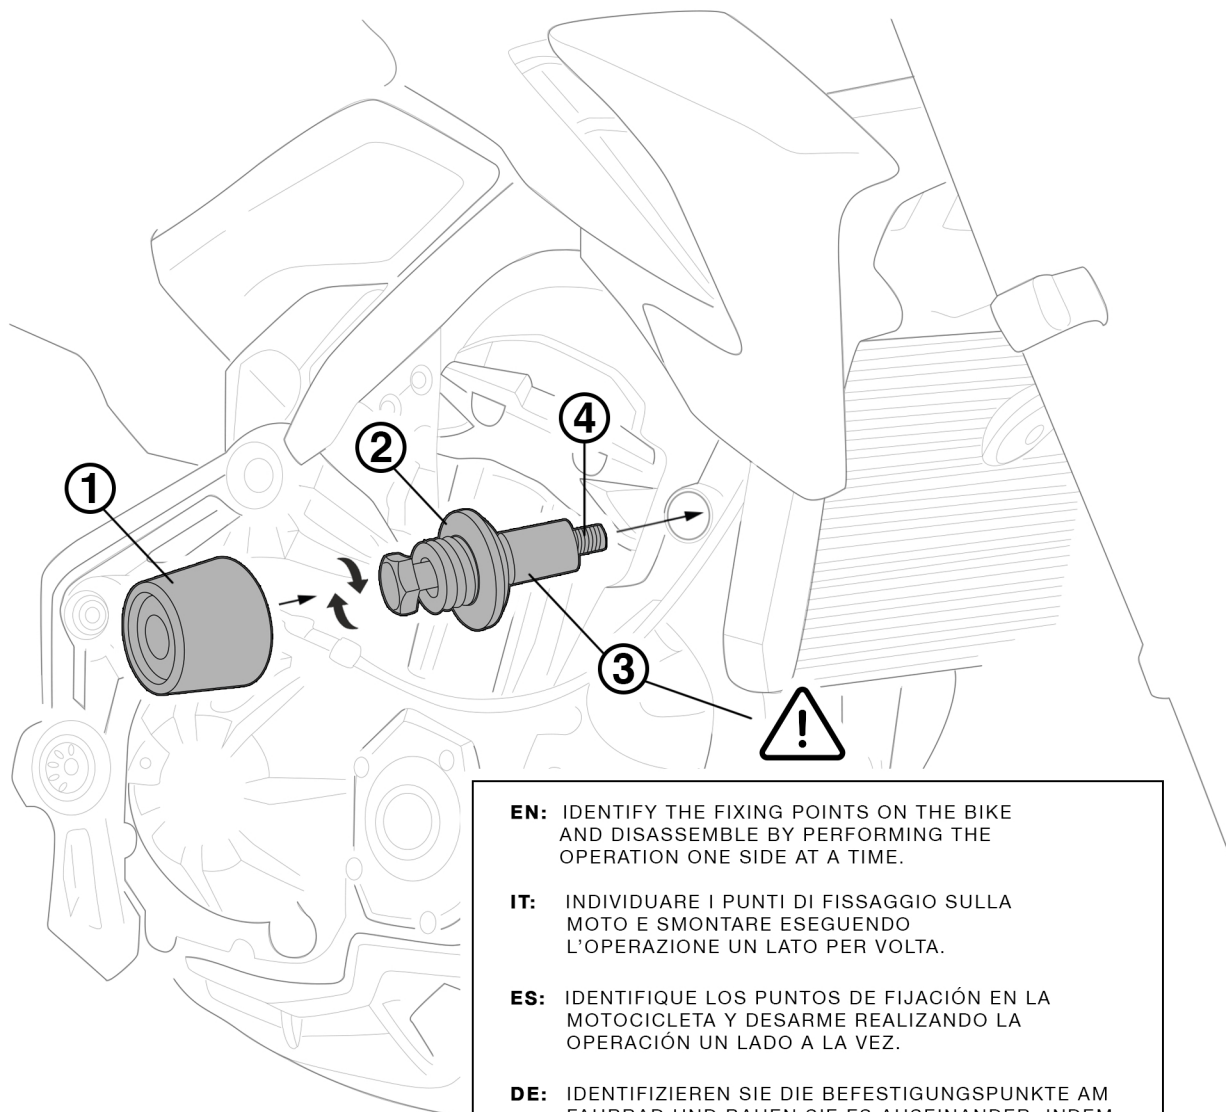

**EN:** IDENTIFY THE FIXING POINTS ON THE BIKE AND DISASSEMBLE BY PERFORMING THE OPERATION ONE SIDE AT A TIME.

**IT:** INDIVIDUARE I PUNTI DI FISSAGGIO SULLA MOTO E SMONTARE ESEGUENDO L'OPERAZIONE UN LATO PER VOLTA.

**ES:** IDENTIFIQUE LOS PUNTOS DE FIJACIÓN EN LA MOTOCICLETA Y DESARME REALIZANDO LA OPERACIÓN UN LADO A LA VEZ.

**DE:** IDENTIFIZIEREN SIE DIE BEFESTIGUNGSPUNKTE AM FAHRRAD UND BAUEN SIE ES AUSEINANDER, INDEM SIE DEN VORGANG EINSEITIG NACH DEM ANDEREN DURCHFÜHREN.

**FR:** IDENTIFIEZ LES POINTS DE FIXATION SUR LE VÉLO ET DÉMONTÉZ-LES EN EFFECTUANT L'OPÉRATION UN CÔTÉ.