

QuickShifter easy Supplementary Manual



Ducati Superbike 1098 2007-2009 (iQSE-1 + QSH-P2E)

Remove the left side fairing.




Plug the QSH connectors in-line with the ignition coil connectors of the front cylinder.

(Black, 3-pole connector at the left side.)



Plug the QSH connectors in-line with the ignition coil connectors of the rear cylinder.

(Black, 3-pole connector at the left side.)

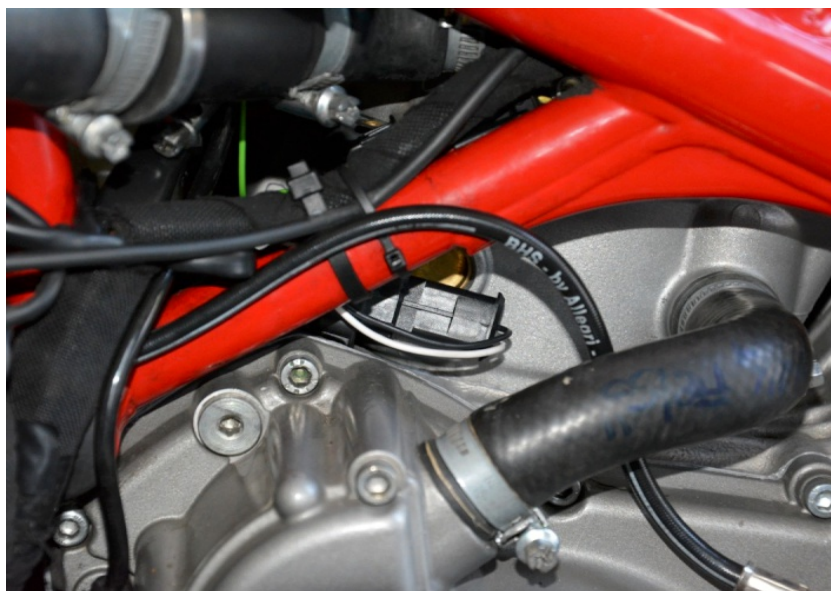

QuickShifter easy Supplementary Manual



Ducati Superbike 1098 2007-2009 (iQSE-1 + QSH-P2E)

Insert the spacer (supplied) into the shift arm.



Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the conical washers at the two sides
of the sensor like this: (O). Tighten the bolt
in this position by about 6 Nm. If you do not
have torque wrench, tighten the bolt until
the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

