

QuickShifter easy Supplementary Manual

Indian Scout 1200 2019- (iQSE-1 + QSH-P2F)

Secure the bike on a stand.


Remove the main seat.



Remove the fuel tank.



Cut the White wire of the QSH-P2F harness which goes to the iQSE-1 module unit at the 3p connector.

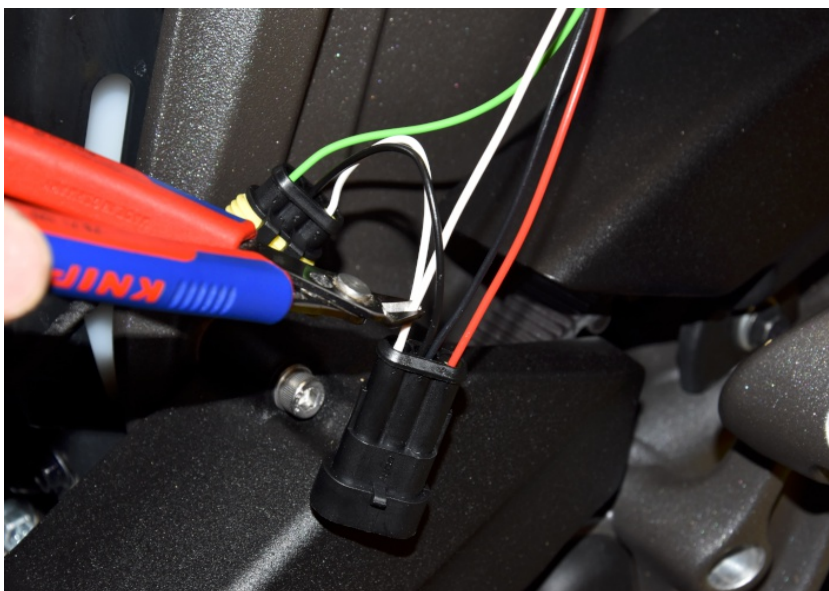


QuickShifter easy Supplementary Manual



Indian Scout 1200 2019- (iQSE-1 + QSH-P2F)

Isolate the unused White wire end at the plug side with a tape.

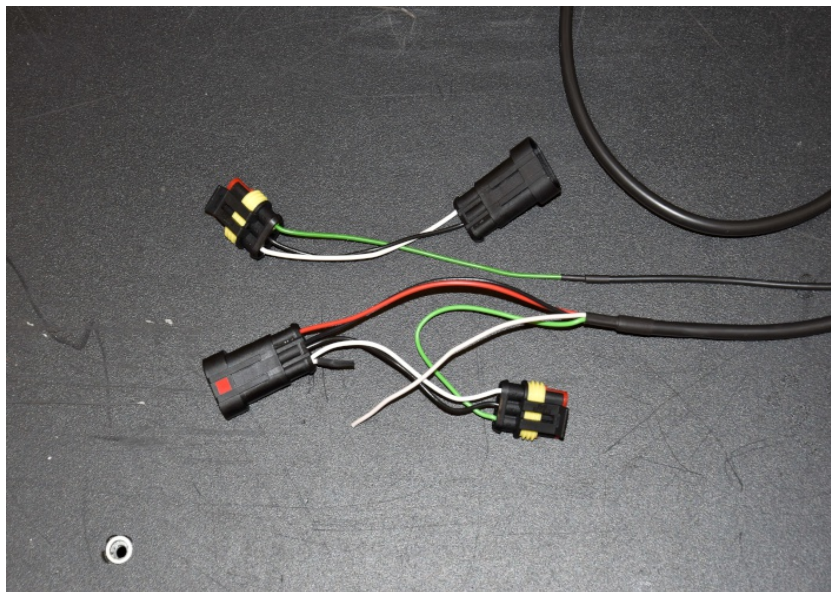


Locate the injector connector below the fuel tank.

(Black, 2-pole connector with Pink/Violet and White/Blue wire.)



Connect the QSH White wire to the injector plug White/Blue wire.

(Use a Scotchlok wire-tap connector.)

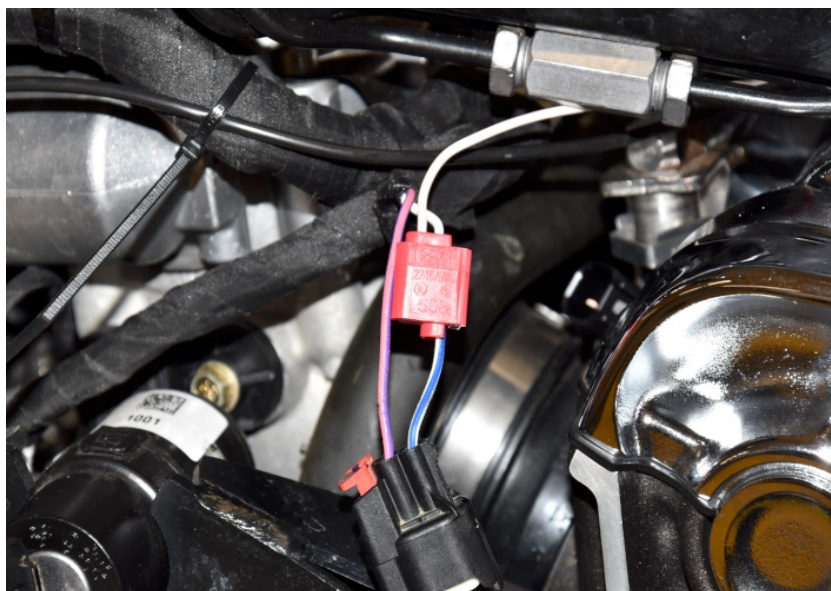


QuickShifter easy Supplementary Manual


Indian Scout 1200 2019- (iQSE-1 + QSH-P2F)

Locate the ignition coil plugs.

(Black, 3-pole connectors with Red, Black, White wire colours.)

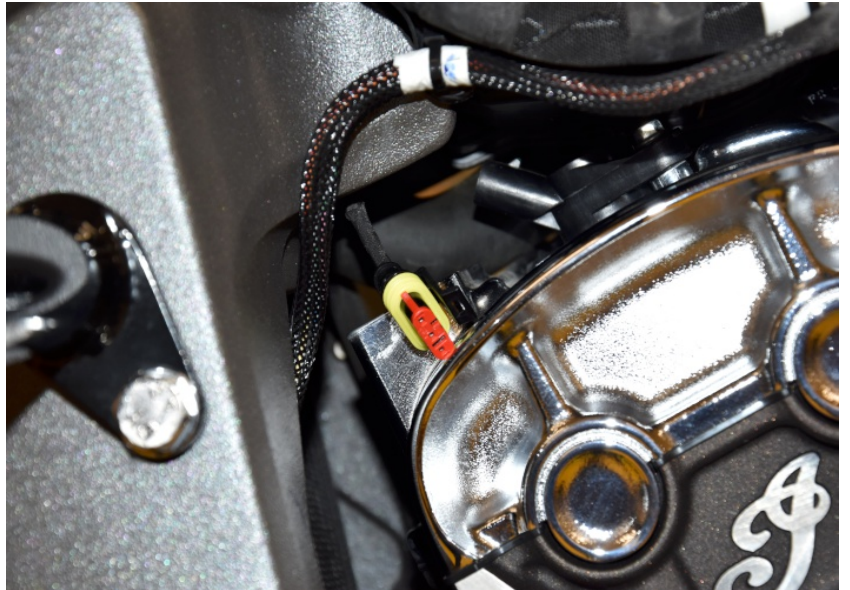

Connect the QSH connectors in-line with the ignition coil plugs.

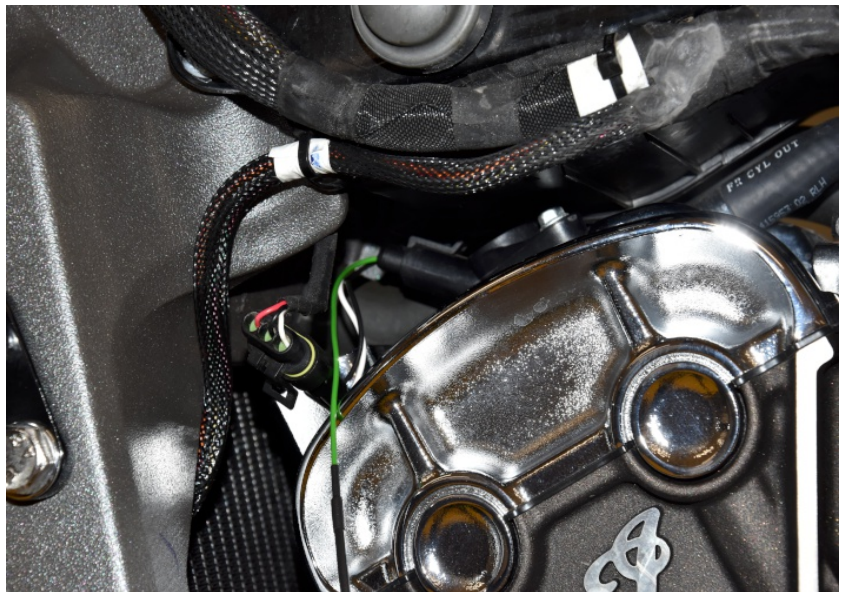

Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the conical washers at the two sides of the sensor like this: (O). Tighten the bolt in this position by about 5-6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



QuickShifter easy Supplementary Manual

Indian Scout 1200 2019- (iQSE-1 + QSH-P2F)

Typical position for the QuickShifter easy.

Secure the unit Properly.

