

Honda NSF250R 2012- (iLE-1-KIT)

Secure the bike on a stand.



Remove the bellypan.

Remove the front and rear fairings.

Remove the fuel tank.




Connect the iLE-H-PWR Red wire to the Black wire of the ignition coil connector.(Switched +12V)

Connect the iLE-H-PWR White wire to the Yellow/Blue wire of the ignition coil connector.(RPM)



Honda NSF250R 2012- (iLE-1-KIT)

Connect the iLE Black wire terminal to the chassis ground.

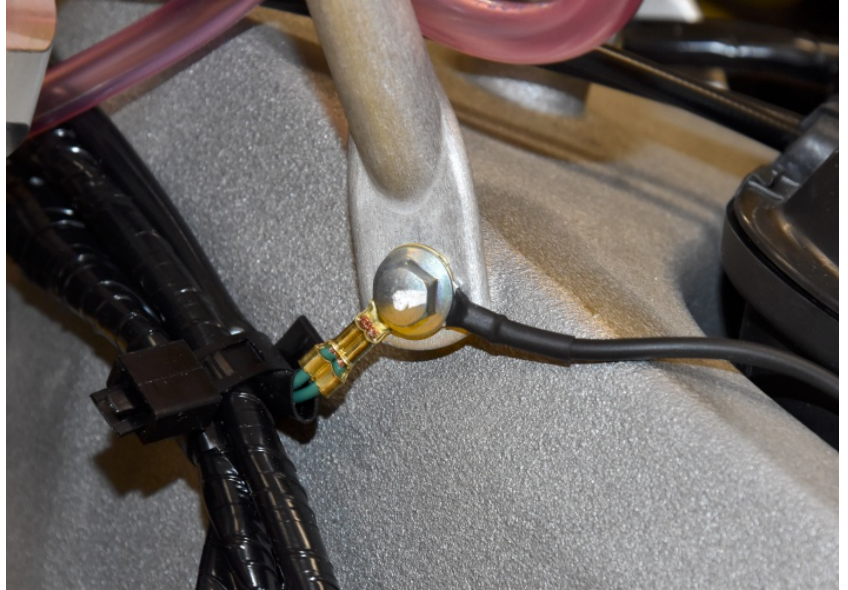

Connect the Red, Black and White wires to the green terminal block as show on the photo.



Connect the green terminal block to the iLE modul.




Honda NSF250R 2012- (iLE-1-KIT)

Optional:

Connect the iLE Black/White wire to the Yellow/Green wire of the Throttle position sensor.

(Blue, 4-pole connector below the seat.)

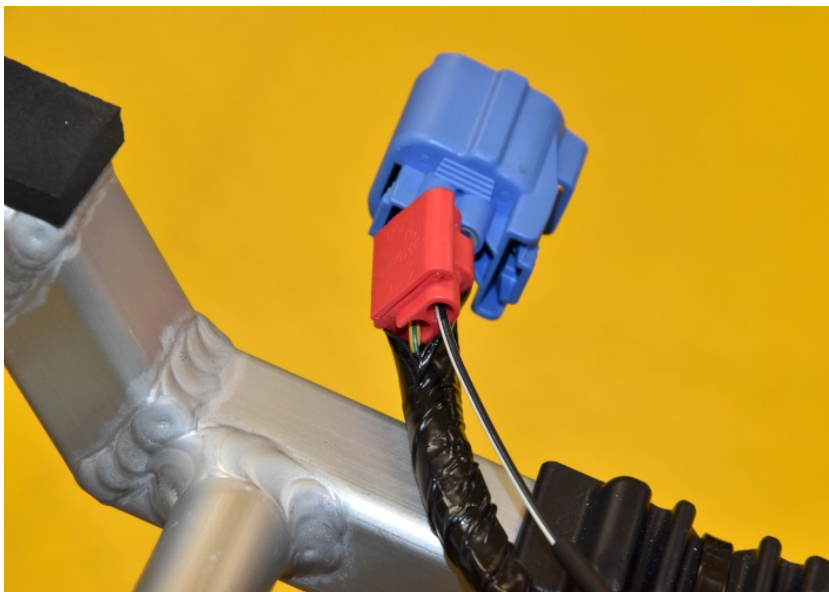

Mount the GPS receiver.

Connect the GPS connector to the iLE module.



Typical position for the iLE module.

Secure the unit properly.

