QuickShifter easy Supplementary Manual



Ducati Multistrada 950 2016- (iQSE-1 + QSH-F1B)

Secure the bike on a stand.




Remove the seats.

Remove the black plastic side covers on the left side, below the fuel tank.



Locate the injector connector.

(Transparent, 3-pole connector marked with 'INJ' label.)

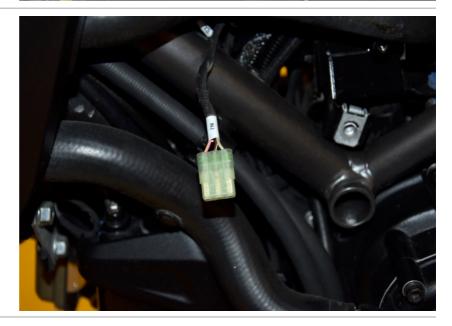

QuickShifter easy Supplementary Manual



Ducati Multistrada 950 2016- (iQSE-1 + QSH-F1B)

Connect the QSH connectors in-line with the injector connector.



Connect the QSH Black wire terminal to the chassis ground.



Replace the bolt of the shift lever by the supplied bolt and add the spacer, washers and sensor exactly as shown on this photo.

Place the conical washers at the two sides of the sensor like this: (0)




QuickShifter easy Supplementary Manual



Ducati Multistrada 950 2016- (iQSE-1 + QSH-F1B)

Mount the QSE sensor.

(Tighten the bolt in this position by 6 Nm using a torque wrench.)

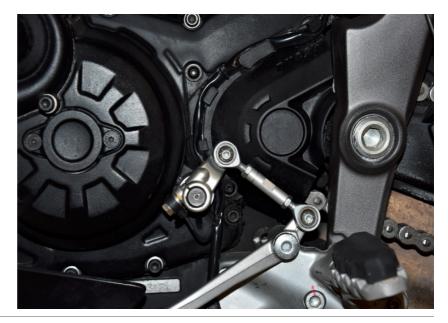

Typical position for the QuickShifter easy.

Secure the unit Properly.

