

QuickShifter easy Supplementary Manual

Aprilia Tuareg 660 ABS TC 2022- (iQSE-1 + QSH-P2F)

Secure the bike on a stand.



Remove the seat.


Remove the side fairings from the fuel tank.

Remove the fuel tank.



Locate the the ignition coil connectors on the left and the right side.

Plug the QSH connectors in-line with the ignition coil connectors.

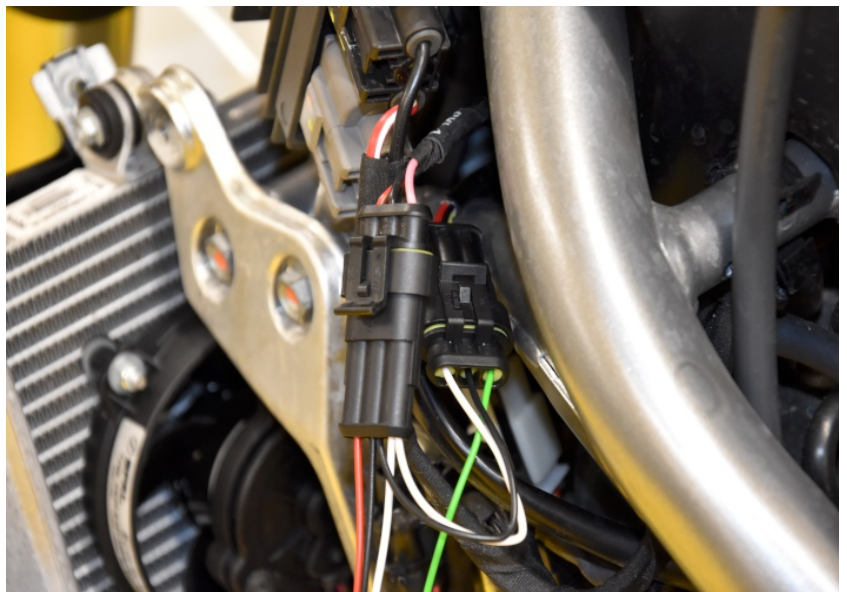

QuickShifter easy Supplementary Manual



Aprilia Tuareg 660 ABS TC 2022- (iQSE-1 + QSH-P2F)

Mount the QSE sensor.

*(Place the sensor in the rod as shown.
Tighten the nut by hand fully and then by a
1/4 turn using a wrench but maximum to
about 6 Nm.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

